

Audi Service

2005 Scheduled Maintenance Intervals

| Miles (in thousands) | 5/25/45/65/85/105 | 15/55/95 | 35/75 |
|---|---------------------|---|--|
| Kilometres (in thousands) | 8/40/70/100/130/160 | 25/85/145 | 55/115 |
| | | | |
| Engine Oil – change oil and replace filter | • | • | • |
| Wiper/Washer/Headlight Washer – check adjustment and function, | • | • | • |
| add fluid if necessary | | | |
| Tires and Spare – check for wear and damage, check pressure | • | | |
| check for wear and damage, check pressure and | | • | • |
| renewal date of tire set (where applicable) | | | |
| Tires – rotate | 5K only | | |
| Service Reminder Display – reset | • | • | • |
| Brake System – check for damage, leaks, pad thickness, fluid level | • | • | • |
| Wiper Arm Pivot Points – lubricate | • | • | • |
| Cooling System – check level, add if necessary | | • | • |
| Exhaust System – check for damage, leaks | | • | • |
| Engine On Board Diagnostics – check fault memory | | • | • |
| Engine Compartment – check for leaks | | • | • |
| Battery – check electrolyte level and add if necessary | | • | • |
| Dust and Pollen Filter – replace | | • | • |
| Automatic Transmission and Final Drive – check for leaks | | • | • |
| Manual Transmission and Final Drive – check for leaks | | • | • |
| DSG (direct shift gearbox) – change oil and replace filter element | | | TT 3.2L only |
| Haldex Clutch – change oil | | TT only | |
| change oil and change filter | | | TT only |
| Sunroof – clean guide rails and lubricate rails with grease spray | | • | |
| Front and Rear Axle – check for excessive play, check dust seals on ball joints | | • | • |
| and tie rod ends | | | |
| Lights – check all lights, check headlight adjustment | | • | • |
| Drive Shaft Boots – check | | • | • |
| Doors – lubricate door hinge mechanisms | | • | • |
| Spark Plugs – replace at 35,000 miles or 3 years, whichever occurs first. | | | 35K only: except allroad |
| Then, every 40,000 miles or 3 years, whichever occurs first. | | | 35K only: except allroad 4.2, S4, A8 4.2L, A4 and A6 |
| replace at 55,000 miles or 6 years, whichever occurs first. | | 55K only: allroad | |
| Then, every 60,000 or 6 years, whichever occurs first. | | 55K only: allroad 4.2, S4, A8 4.2L, A4 and A6 | |
| – replace at 75,000 miles | | | 75K only: except allroad |
| | | | 75K only: except allroad 4.2, S4, A8 4.2L, A4 and A6 |
| Continuously Variable Transmission (multitronic) – change ATF | | | • |
| Power Steering Fluid – check, add if necessary | | | • |
| Air Cleaner – clean housing, replace filter element | | 55K only: A4, A6, | Except A4, A6, A8 4.2L |
| Ribbed V Belt – check condition | | A8 4.2L | |
| | | | 35K only: A8 6.0L 75K only: A8 6.0L, 2.0TFSI, 3.0L, 3.2L |
| Ribbed V Belt – replace | | | 75K only: except 2.0TFSI, 3.0L, 3.2L |
| Snow Screen for Air Cleaner – clean | | A4, A6 only | A4, A6 only |
| Underbody – check for damage and leaks | | • | • |
| Road Test – check braking, kick-down, steering, electrical, heating and | | • | • |
| ventilation systems, air conditioning, shift lock operation and power accessories | | | |
| Rear Lid Hinges – lubricate | | A8 only | A8 only |
| Timing Belt – replace | | | 75K only: 1.8T, 3.0L, A8 4.2L |
| Timing Belt and Timing Belt Tensioning System – replace | | | 75K only: 2.7L turbo |

At 110K miles (175km) replace timing belt (2.0TFSI engine only). Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary (2.0TFSI engine only).

Brake Fluid - replace every 2 years regardless of mileage.

 $\label{eq:cloth} \mbox{Cloth Top}-\mbox{check function and rollover protection every 2 years regardless of mileage (Audi A4 Cabriolet only).}$

Audi of America, Inc. believes the information and specifications to be correct at the time of printing. Specifications, maintenance intervals, standard features and options subject to change without notice.